


Adjusting Your Shifter Linkage

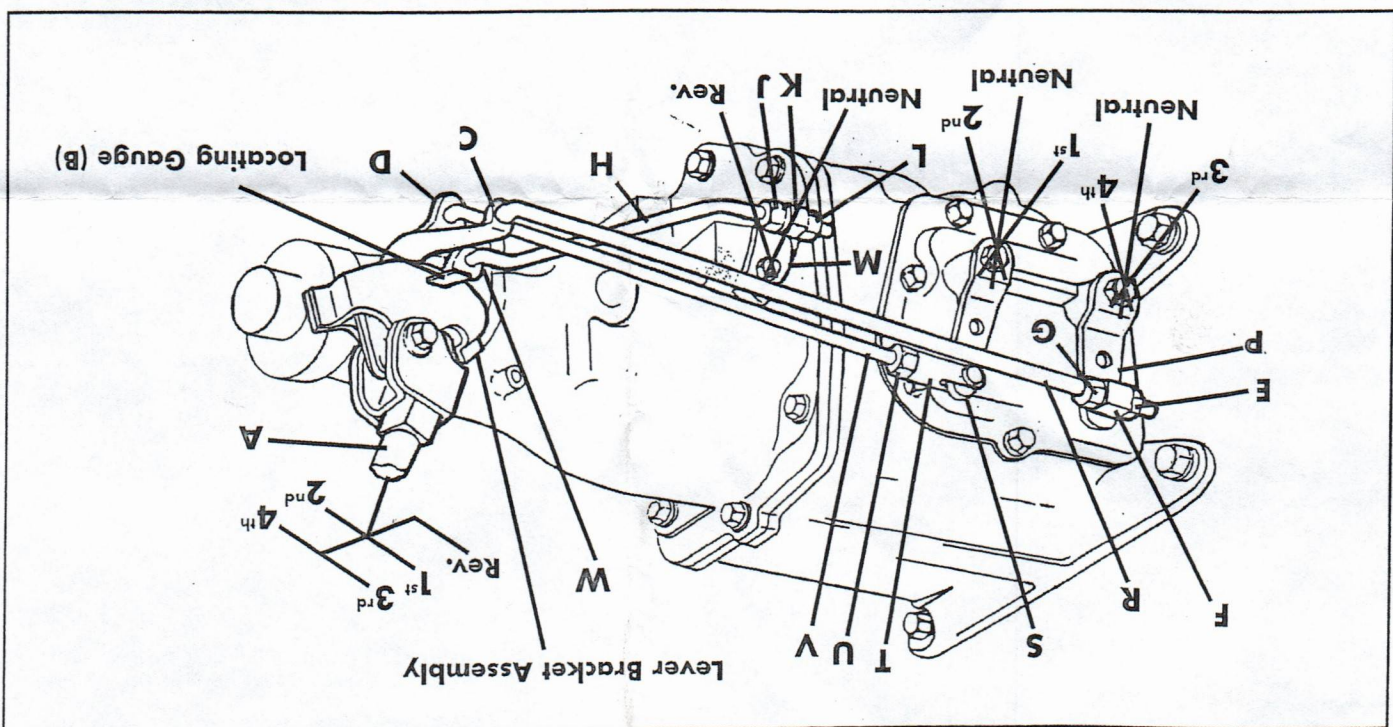




1. Set levers (M), (P) & (S) in neutral detent position.
2. Move shifter lever (A) to neutral detent position & insert Locating gauge (B) into control lever bracket assembly.
3. Install rod (M) with retainer on lever (D).
4. Maintaining lever (D) against locating pin, adjust clevis (T) at lever (S) until clevis pin freely passes through holes in clevis & lever.
5. Install clevis pin, washer, & cotter pin, tighten jam nut (U) to specified torque against clevis.
6. Install rod (H) with retainer on lever (W).
7. With jam nuts (J) & (L) & swivel (K) loose on rod (H), insert & attach swivel with washer & retainer to lever (M).
8. Maintaining lever (W) against locating gauge (B) & while holding swivel (K), run jam nut (J) against swivel until nut contacts swivel. Then tighten jam nuts (L) against swivel to specified torque.
9. Install rod (R) with retainer on lever (C).
10. With jam nuts (E) & (G) & swivel (F) loose on rod (R), insert & attach swivel with retainer to lever (P).
11. Maintaining lever (C) against locating gauge (B) & while holding swivel (F), run jam nut (G) against swivel until nut contacts swivel. Then tighten jam nut (E) against swivel to specified torque.
12. Remove locating gauge & check shifts to insure proper operation. Readjust clevis & swivels if necessary.

We do not guarantee or warrant this product. Should this product be found defective upon purchase, please return, freight prepaid, and at that time we will determine if repair or replacement is in order. We are not responsible for any damage to engine or other parts, labor, or personal injury or any other damage or injury arising from the use of this product.

Volunteer Products • 3103 E. Gov. John Sevier Hwy. • Knoxville, TN 37914

Installation of New Shifter

1. Unscrew knob (A)
2. Lift off lock-out rod spring (B)
3. Remove T-handle (C) (lock out rod should come with handle)
4. Remove T-handle bushing 1964-67 only (D) (**68-81 Does not use a bushing **)
5. From underneath car, push shifter assembly up through shifter boot and position onto shifter mount bracket. (E)
6. Install long bolt with lock washer (F) through shifter control lever shaft (G) * Torque to 20-30 ft. lbs.
7. Install short bolt with lock washer (H) through shifter lever bracket (I) * Torque to 20-30 ft. lbs.
8. From inside car, replace bushing 1964-67 only (D), T-handle with rod (C), spring (B), and knob (A).

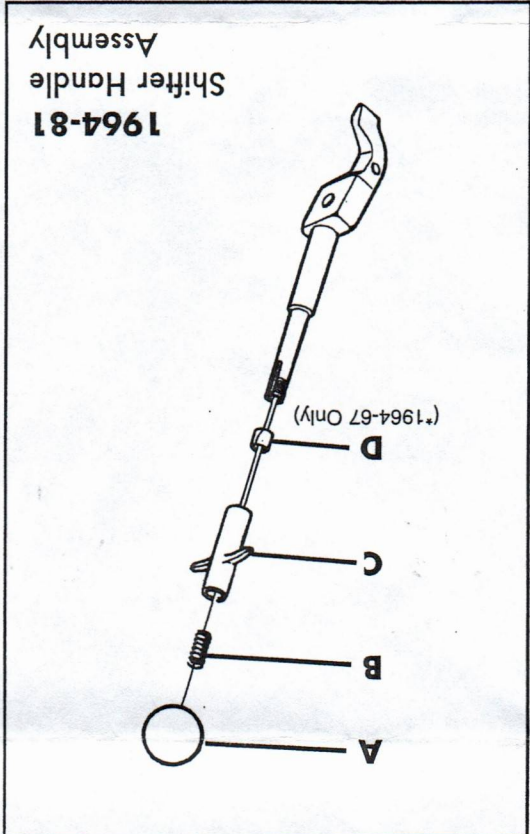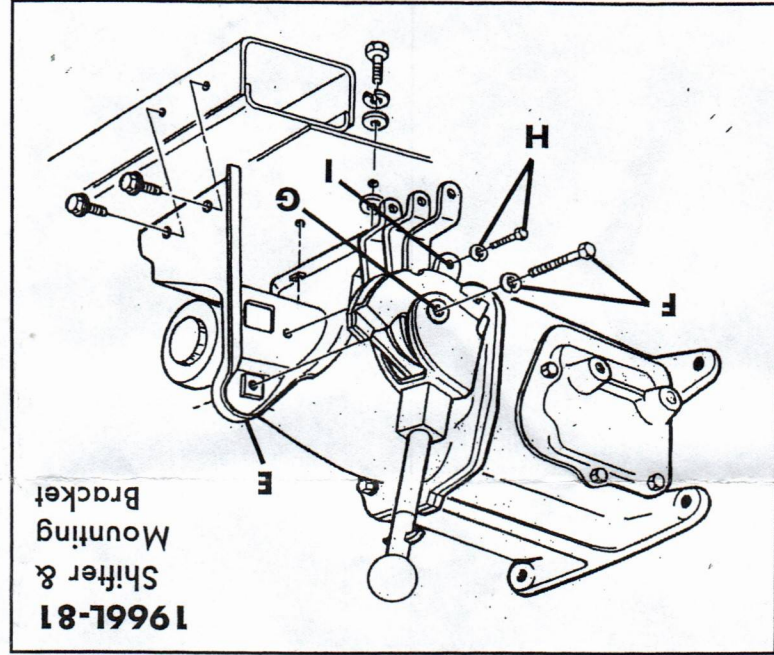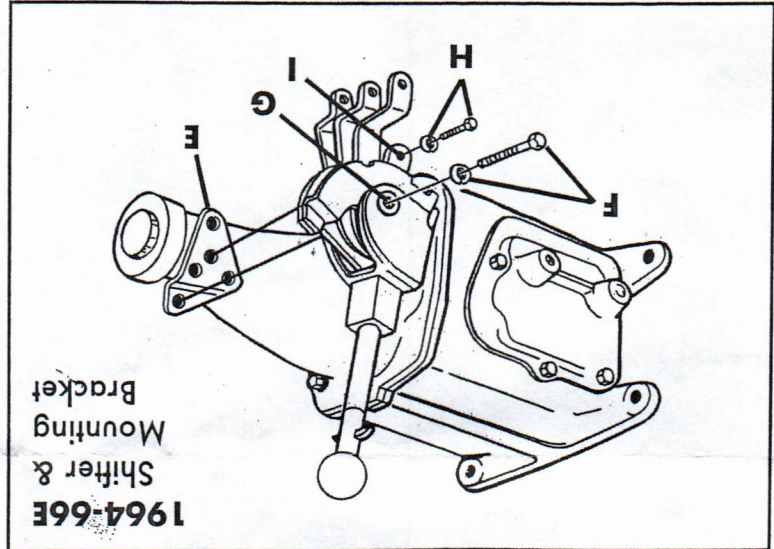

Should this product be found defective upon purchase, please return, and at that time we will determine if repair or replacement is in order. We are not responsible for any damage to engine or other parts, labor, or personal injury or any other damage or injury arising from the use or misuse of this product.

Volunteer Products
3103 E. Gov. John Sevier Hwy.
Knoxville, TN 37914