

EC PRODUCTS DESIGN, INC.

EC101 & EC130 INSTALLATION INSTRUCTIONS


1965-66 Corvette **Power Antenna Replacement**

- A. Remove old antenna nut (1), bezel (2), and gasket (3). (On cars equipped with standard exhaust it may be necessary to remove muffler to remove old antenna).
- B. Unscrew coaxial cable (4) and bolt (5) on bottom of support bracket and disconnect power antenna lead (6).
- C. Position new antenna as shown in diagram.
- D. Install antenna gasket (3), bezel (2), and nut (1) as shown in diagram. Do not tighten at this point.
- E. Connect coaxial cable (4) install bolt through support bracket into antenna base (5), and connect antenna power lead (6)
- F. Be sure ground strap is still in place (7).
- G. Raise antenna to full height and adjust to vertical position. Tighten bolt (5) on support bracket. Tighten hex nut (1) at this point. Do not overtighten nut.
- H. Check for radio reception.

IMPORTANT NOTICE

If you have a problem with your antenna, do not attempt to fix it yourself! First call for tech help 805-466-4781. DO NOT shove the mast down or pull-it out. Do not bend it in any way. Doing this will only make things worse and cost you more money. If we advise you to return the antenna for repair, please be sure to protect it with adequate packaging. If the mast is stuck in the extended position, strap it to a stick to keep it from being damaged during shipping.

RETURNED ANTENNAS MUST HAVE ALL HARDWARE, IENOT, THE

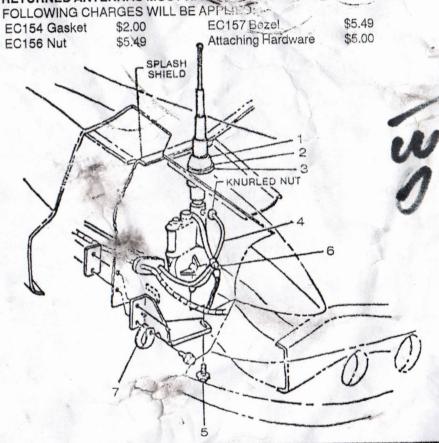

We test all power antennas before they leave our warehouse. However, we strongly suggest that you test your antenna again before installing it in your Corvette. It's easy. Using a battery charger, attach the black charger cable to the antenna bracket and briefly touch the red charger cable to the connector on the inside side of the antenna plug. Do not set the charger higher than 12 amps. This will raise the antenna. To lower the antenna, briefly touch the red charger cable to the connector on the inside center of the antenna plug.