



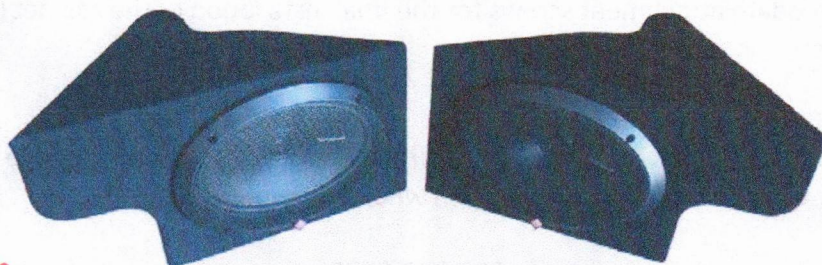

### **C3 Corvette Convertible Speaker Kit**

Thank you for your purchase. Our Audiophile sound cabinets are not just any speaker system. They feature a unique "tuck-a-way" mounting design that won't compromise storage compartment space. This innovative design and the "toe-in" angled cabinet placement create a "sweet spot" in your car's center for optimum sound direction. We're excited for you to experience the unique features of our product.

#### **Optimum Sound Direction**

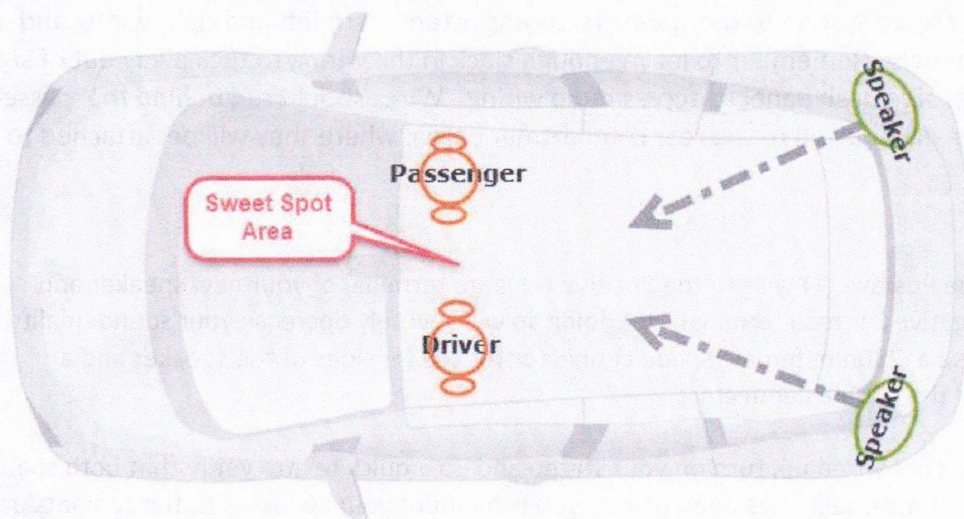

#### **Cabinet Kit Contents**

- Premium MDF carpeted cabinets with custom-fit beveled contoured edges.
- Speaker cabinet attachment hardware.
- Recommended tools and accessories: an electric drill, Phillips screwdriver, awl, masking tape, 16 or 18-gauge speaker wire, and two .250 and .110mm female spade wire connectors.

#### **Speaker Equipped Kits**


This package includes one pair of Rockford Fosgate Prime speakers (4 ohm 2-Way, 65 Watts RMS, 130 Watts Max) and mounting hardware.

#### **Instructions**

Position each speaker in the left and right corners of the rear storage compartment area, as indicated in the picture. Before attaching the speaker cabinets in place, attach the "L" brackets to the inside of the cabinets with the screws provided. Run wiring from your stereo system to the speakers, paying attention to left and



right wiring and positive and negative speaker terminals. Remember to leave enough slack in the wiring to tuck away out of sight later. Remove the passenger-side dash console cover to access the radio.

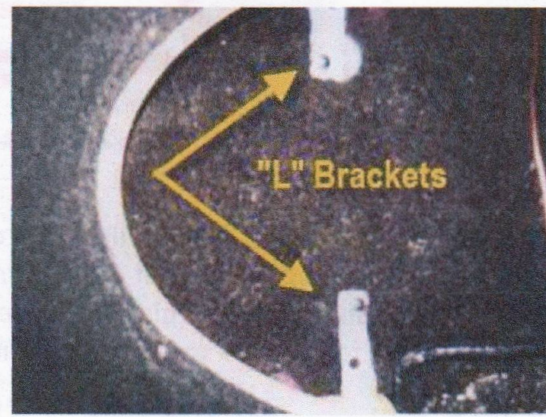

Run wiring from your stereo system to the speakers, paying attention to left and right wiring and positive and negative speaker terminals. Remember to leave enough slack in the wiring to tuck away out of sight later. Remove the passenger side dash panel to access radio wiring. Wires should run behind the passenger side kick panel, then under the door sill to the rear compartment area, where they will be attached to the speakers.

### **Important**

It's crucial to attach the Positive (+) wire to the Positive (+) large terminal of your new speaker and the same with the Negative (-) small terminal. Not doing so will severely decrease your sound quality and bass response. Use a .250mm female spade connector for the (+) sides of the speaker and a .110mm connector for the (-) side connectors.



Now that your speakers are wired up, turn on your stereo and do a quick test to verify that both speakers are working correctly. Once proper functionality has been tested, you can mount your speakers to the cabinets using the four pre-drilled holes. Identify where the attachment screws will go in the compartment panel and drill small pilot holes into the back panel to accommodate attachment screws for the final installation of the cabinet (one screw per "L" bracket). Reinstall speakers and cabinet covers.

### **Installation Tip**

Place masking tape on the carpeting where you plan to drill the mounting holes. The hole in the tape created with an awl will make it easier to locate the screw hole again when you mount the cabinet.

For questions about installation, please call me at **208-801-8179**. Please visit our website for more. C3 Corvette products at [www.InnovativeCorvetteProducts.com](http://www.InnovativeCorvetteProducts.com)



***Our production facility***