




## 57 ROCKER MOLDING CLIP SET

### INSTALLATION HINTS:

HOLD CLIP FIRMLY AGAINST BODY.  
 CRIMP TABS TOGETHER USING VISEGRIPS OR PLIERS TO LOCK CLIP AGAINST BODY.

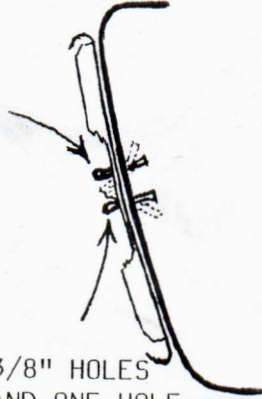

1. DRILL FIVE EVENLY SPACED 3/8" HOLES ALONG EACH ROCKER PANEL, AND ONE HOLE IN EACH FENDER SKIRT, ON CENTERLINE OF ROCKER MOLDING LOCATION.
2. MOUNT CLIPS IN ROCKER PANEL AS DEPICTED IN ILLUSTRATION.
3. USE SCREW IN CLIP AT FRONT OF MOLDING.
4. HOOK MOLDING ON BOTTOM OF CLIPS AND APPLY PRESSURE AT TOP OF MOLDING TO SNAP OVER CLIPS.

THESE TABS  
 MAY BE BENT OUTWARD  
 SLIGHTLY TO ACHIEVE  
 TIGHTER SNAP FIT.

