
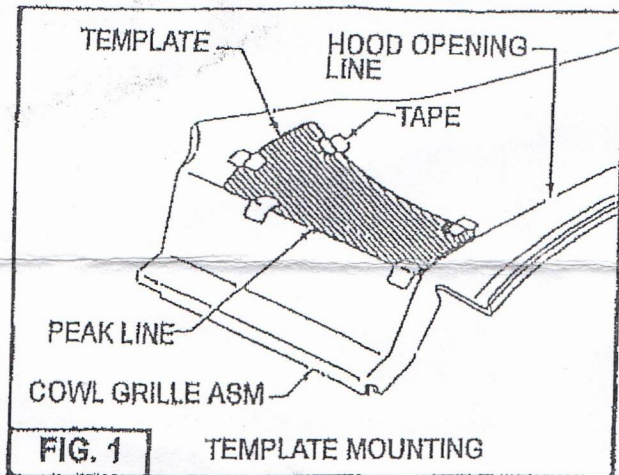
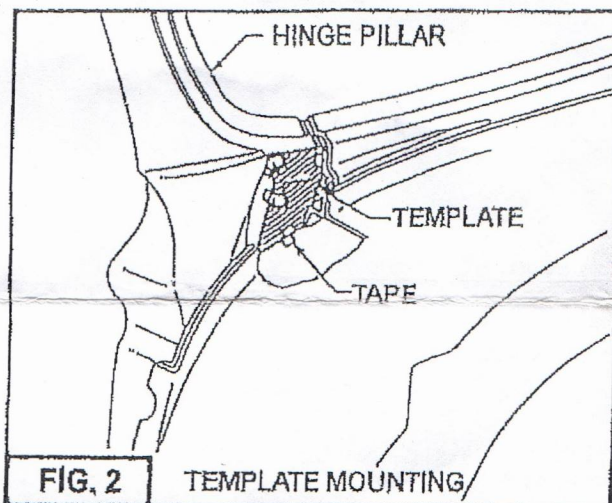


RADIO ANTENNA INSTRUCTION SHEET TRUCK (EXCEPT TILT CAB)

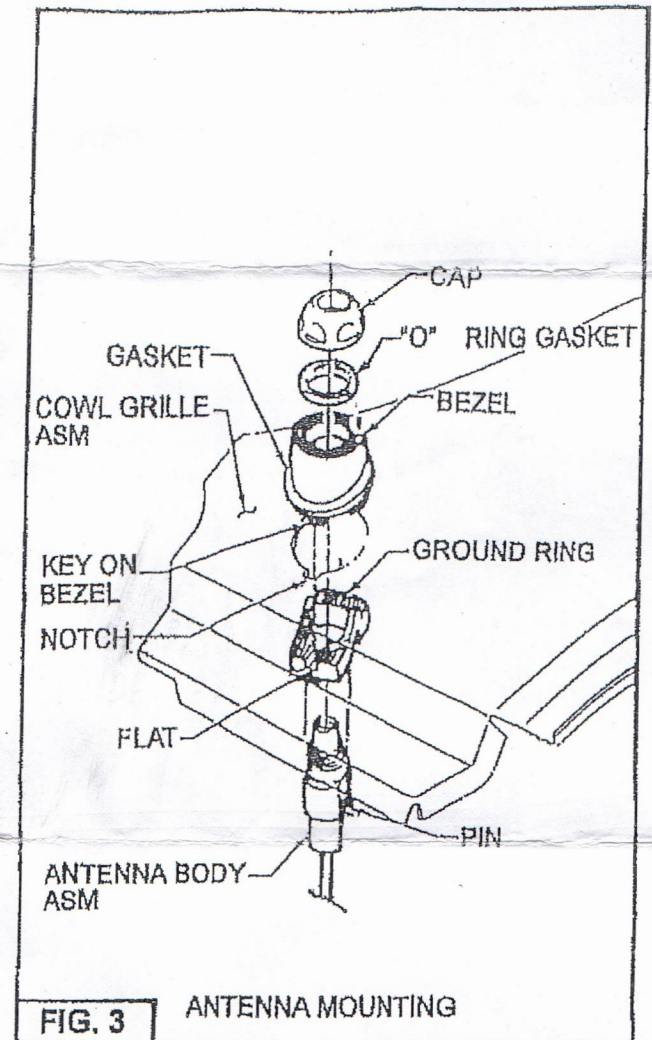

STEP 1 REMOVE & RETAIN WINDSHIELD WIPER ROD ASSEMBLIES.

STEP 2 REMOVE & RETAIN COWL GRILLE ASM & ATTACHING PARTS.

STEP 3 ALIGN & TAPE TEMPLATE ON R.H. SIDE OF COWL GRILLE ASM, CENTERPUNCH, REMOVE TEMPLATE, DRILL HOLE & FILE NOTCH AS INSTRUCTED ON TEMPLATE. SEE FIG. 1.

STEP 4 ALIGN & TAPE TEMPLATE TO HINGE PILLAR, CENTERPUNCH, REMOVE TEMPLATE & DRILL HOLE AS INSTRUCTED ON TEMPLATE. SEE FIG. 2.

STEP 5 ASSEMBLE GROUND RING ON PINS OF ANTENNA BODY & PLACE ANTENNA BODY THRU HOLE IN COWL GRILLE ASM. SEE FIG. 3.

STEP 6 SUB-ASSEMBLE GASKET TO BEZEL. PLACE OVER ANTENNA BODY & SLIP KEY ON BEZEL THRU NOTCH IN COWL GRILLE ASM & INTO FLAT OF GROUND RING. INSERT "O" RING TYPE GASKET INTO BEZEL. PLACE CAP OVER ANTENNA BODY & TIGHTEN WITH AN OPEN END WRENCH. SEE FIG. 3.

TITLE	INSTRUCTION SHEET RADIO ANTENNA INSTALLATION CHEVROLET TRUCK (EXCEPT TILT CAB)	
DWG NO.	92974534	
		SHEET 1 OF 3

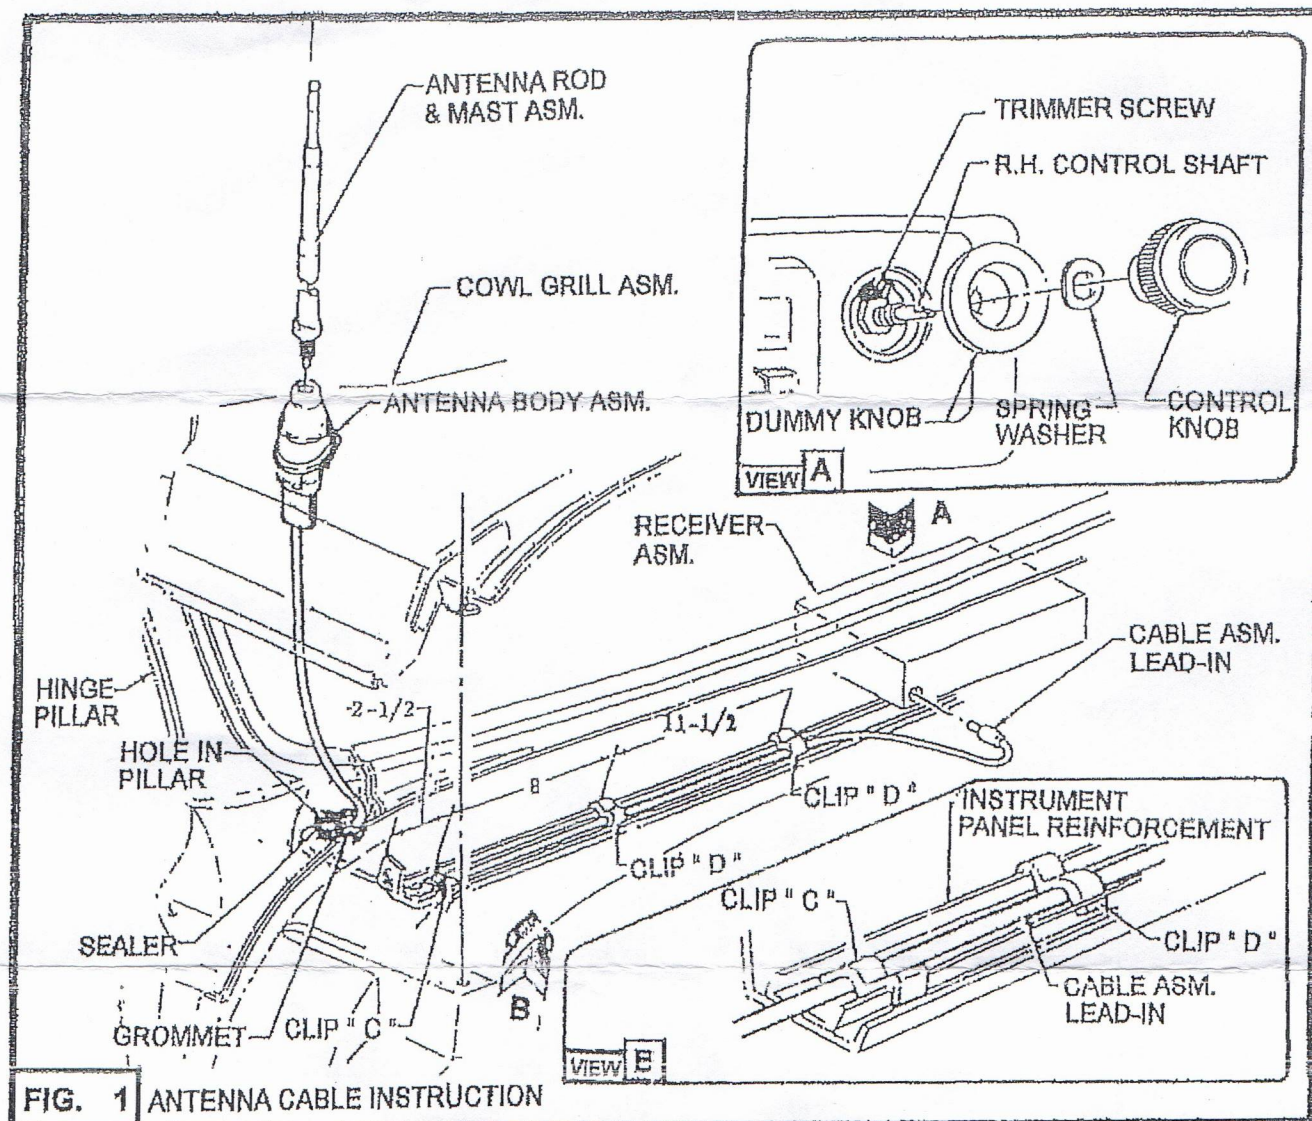


FIG. 1 ANTENNA CABLE INSTRUCTION

STEP 1 ROUTE CABLE ASM. LEAD-IN THRU GROMMET. APPLY SEALER TO GROMMET & PILLAR HOLE. ROUTE CABLE ASM. LEAD-IN THRU PILLAR HOLE SECURING GROMMET IN HOLE. SEE FIG. 1.

STEP 2 REPLACE PREVIOUSLY REMOVED COWL GRILLE ASM. WITH EXISTING ATTACHING PARTS.

STEP 3 INSTALL ROD & MAST ASM. SECURELY INTO ANTENNA BODY ASM. SEE FIG. 1.

STEP 4 ROUTE CABLE ASM. LEAD-IN ALONG INSTRUMENT PANEL REINFORCEMENT & PLUG INTO BACK OF RECEIVER. SECURE CABLE TO INSTRUMENT PANEL REINFORCEMENT WITH CLIPS "C" & "D". SEE FIG. 1 & VIEW B.

STEP 5 REMOVE EXISTING CONTROL KNOB, SPRING WASHER & DUMMY KNOB FROM R. H. CONTROL SHAFT TO GAIN ACCESS TO ANTENNA TRIMMER SCREW. SEE VIEW A.

STEP 6 RAISE ANTENNA TO A HEIGHT OF 31 INCHES ABOVE COWL SURFACE (FULL HEIGHT IN REMOTE AREAS). TURN RECEIVER "ON" TO FULL VOLUME. TUNE IN A WEAK STATION AT APPROX. 1400 KC. & ADJUST TRIMMER SCREW FOR MAXIMUM VOLUME. IF A CLEAR SIGNAL IS NOT AVAILABLE AT 1400 KC. THEN TUNE A WEAK SIGNAL NEAR 700 KC. & ADJUST TRIMMER SCREW FOR MAXIMUM VOLUME. SEE VIEW A.

NOTE Adjust trimmer screw thru existing hole in instrument panel.

STEP 7 REPLACE ALL PARTS PREVIOUSLY REMOVED.

TITLE INSTRUCTION SHEET
RADIO ANTENNA INSTALLATION
CHEVROLET TRUCK
(EXCEPT TILT CAB)

DWG NO.

92974534

SHEET
2 OF 3




PEAK

INSTRUCTIONS:

1. ALIGN TEMPLATE WITH HOOD OPENING & PEAK LINES. TAPE TEMPLATE SECURELY.
2. SCRIBE CENTER LINES USING HEAVY MARKS ON HOLE EDGE & SCRIBE OUTLINE OF HOLE & NOTCH.
3. REMOVE TEMPLATE, CENTER PUNCH & DRILL 1.12 DIA. HOLE.
4. ENLARGE HOLE TO SCRIBE LINE & FILE INDEX NOTCH.

HOOD OPENING

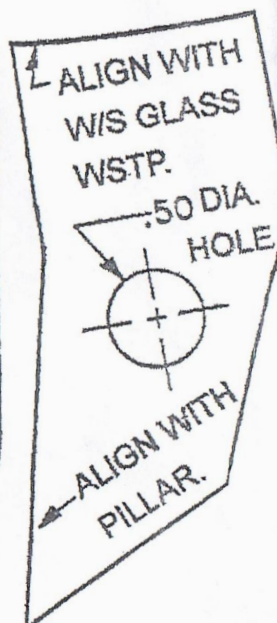

ALIGN WITH
W/S GLASS
WSTP.

.50 DIA.
HOLE

ALIGN WITH
PILLAR.

TITLE

INSTRUCTION SHEET
RADIO ANTENNA INSTALLATION

CHEVROLET TRUCK
(EXCEPT TILT CAB)

DWG NO.

92974534

SHEET
3 OF 3